# TonneauMate TM OWNERS MANUAL



P.O. Box 1078, 2209 Kellen Gross Dr., Yankton SD 57078 Phone: 1-877-TRUXEDO (1-877-878-9336) Fax: (605) 664-9304

www.truxedo.com

P/N 1117442 Rev. C

# TWO YEAR WARRANTY

TruXedo, Inc. warrants that all new, unused products are free from defects in material and workmanship. This Two Year Limited Warranty is effective if the product is properly installed and used for the purpose intended. It applies to the original buyer only. TruXedo's obligation under this Warranty is limited to repairing, or at its option, replacing any part that is returned, transportation prepaid, to TruXedo, Inc., Yankton, South Dakota, if the product is, in our judgment, defective. All materials must be accompanied by an RMA (Returned Material Authorization) number requested by and authorized in advance of returning the materials. TruXedo, Inc. shall not be liable or responsible to supply or pay labor to replace any part found defective, nor shall it be liable for any damages of any kind or nature to person, product, or property.

There are no Warranties for used products or products that have been repaired, altered, modified, subjected to misuse, negligence, accident or ordinary wear and tear.

TruXedo, Inc. products are sold without any express warranty except as set forth above. TruXedo, Inc. is not obligated to honor warranty claims if Genuine TruXedo, Inc. parts are not utilized.

# **SAFETY INSTRUCTIONS**

- 1. Do not place objects on or against lid or framework.
- 2. Do not tie cargo to TonneauMate framework.
- 3. Never allow children or pets to occupy TonneauMate.
- 4. All mounting fasteners must be securely tightened before operation.

# **OWNER/USER RESPONSIBILITIES**

It is the responsibility of the owner/user to read this manual and comply with the operating procedures. The owner/user is also responsible for inspecting the TonneauMate, and for having parts repaired or replaced when worn or damaged.

Failure to follow safety instructions and warning labels could result in failure of your TonneauMate and/or personal injury.

#### **MESSAGES TO INSTALLER**

- Always wear safety glasses and/or other necessary protective equipment when installing your TonneauMate.
- These instructions are complete for most pickup models. Additional instructions are included, if required for your truck. Please read entire manual before installing your TonneauMate.

# **TOOLS REQUIRED**

1/2" & 9/16" Socket

### **TONNEAUMATE MAINTENANCE**

TonneauMate can be hand washed with soap and water or cleaned in a car wash.


# **TONNEAUMATE LOAD RATING**

TonneauMate is rated for 200 lbs.

# Direct all warranty claims to TruXedo, Inc. at 1-877-878-9336.

Register online at www.truxedo.com or mail this form to: TruXedo, P.O. Box 1078, Yankton, SD 57078-1078

Name:		- ı Pr	oduct Purchased:
Address:		-	Original TruXedo
City:	State:Zip:	-   ŏ	TruXedo Lo Pro QT
Phone Number:		- lõ	TruXedoPlus
Email Address:		-   Ŏ	TruXport
Date Purchased:	Price Paid:		Deuce
Dealer Name:			TonneauMate
Pickup Make:		O	TonneauTrax
Model:	Year <sup>.</sup>		

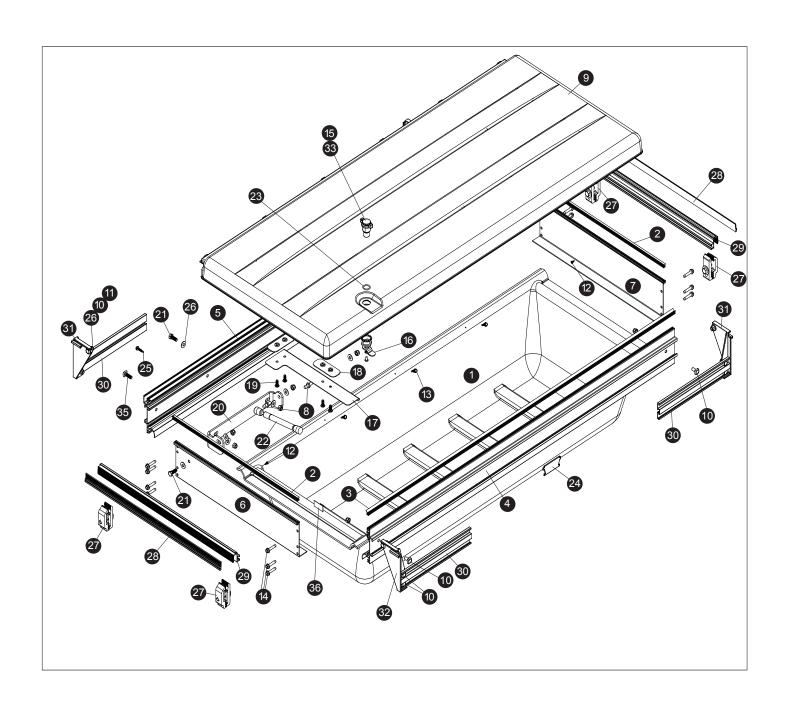


#### TRUXEDO® TONNEAUMATE REPLACEMENT Self Drill Screw Hex Head **25** 1704552 1704116 Pan 13 1704551 Self Drill Screw Hex Head **26** 1700427 Flat Washer 1704234 Side Lid Seal **14** 1704123 Self Tapping Screw Hex Head 1704421 **27** 1115190 Clamp (one) Front Lid Seal **15** 1704416 Wing Handle Lock 1704236 Front Base **28** 1704178 Rail Seal **16** 1704436 Locking Cam Lever **29** 1704157 Mounting Rail 1704445 Rear Base **17** 1704481 Gas Spring Mount Support Arm Base **30** 1704239 Left Base 1704237 **18** 1704474 Backing Plate Right Base **31** 1704113 Hanger Bracket Left 1704238 **19** 1704522 Machine Screw 1703088 Ball Stud **32** 1704114 Hanger Bracket Right **20** 1704500 Gas Spring Bracket **33** 1704362 Two Keys (Not Shown) 1704435 Lid (see 34) Machine Screw **21** 1702926 Lid Assy (9,17,18,19) **34** 1704404 10 1703595 Square Head Screw Gas Spring **22** 1704248 **35** 1704499 Square Head Screw **11** 1700419 Nylon Lock Nut 23 1704448 Lock Seal 36 1704512 Patent Decal 12 1703973 Self Drill Screw Pan Head 24 1704266 TonneauMate Logo

#### **SUPPORT ARM INSTALLATIONS**

Remove all hardware from inside the toolbox. Slide support arms into channel by aligning square head bolt until support arm slides in. Orient left/right support arms as shown below. Do not tighten fasteners at this time. The support arms need to slide in and out for installation. Close lid for ease of installation.

#### When Used With TruXedo Deuce Tonneau Cover:

Deuce kits will not need the mounting rails, seals, or adjustable clamps. For ease of installation on the Deuce, roll cover up and open Deuce from front. Go to step 3 for installation.

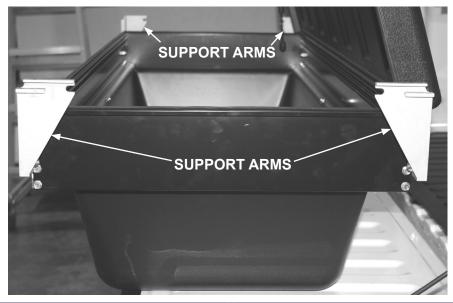


End View of Toolbox

# MOUNTING RAIL INSTALLATIONS

The toolbox can be mounted with many different applications. Choose one best for your application. When choosing the location to mount the toolbox, keep in mind to allow room for opening lid. The illustrations below show a few different ways to mount the mounting rail.

Note: The toolbox may be mounted at the front, center, or rear of truck box. Use two adjustable clamps per rail, keep clamps towards the ends of mounting rail. Use rail seal only with no tonneau cover applications or some top mount applications. No seal is needed when mounting to an existing tonneau cover like the ones shown below.

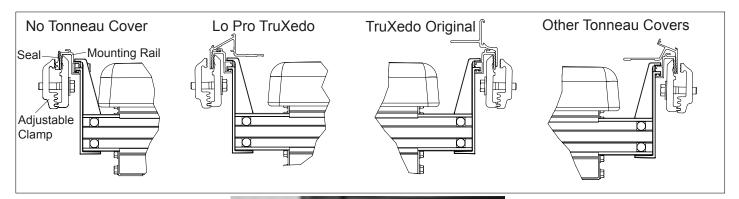

Install clamps towards end of mounting rail





# **TOOLBOX AND FASTENERS INSTALLATION**

3 Slide two square head bolts with washers and nuts to the center of the mounting rail.



Lift and hook one side of toolbox to mounting rail.

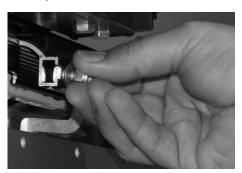

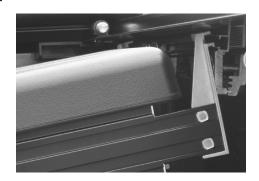

Lift and hook other side of toolbox to mounting rail.



Open lid to assure proper clearance.





Once the toolbox has been positioned, slide the fasteners over the hanger brackets and tighten securely. Tighten the four lock nuts on the inside of the toolbox to keep from sliding from side to side.



